 
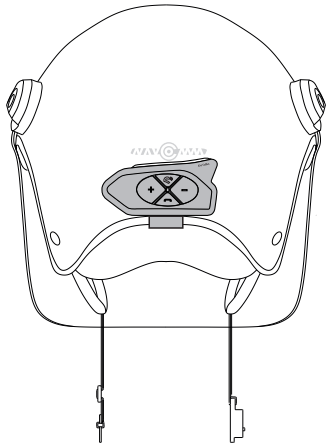 


PPG BLUETOOTH COMMUNICATION INTERCOM

GoTalk4

1. ABOUT

1.1 Product Details

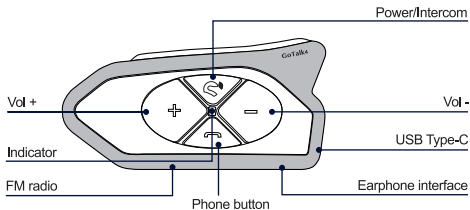


2. PACKAGE CONTENTS



Headset Main Unit



User Manual

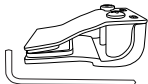

Helmet Clamp & Allen Wrench



Charging cable

3. GET STARTED

3.1 Operation Instruction




Single-click




Double-click



1s Long Press

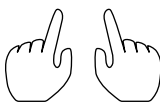


Press Simultaneously

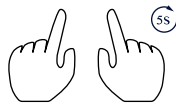

5s Press Simultaneously


3.2 Power On/Off

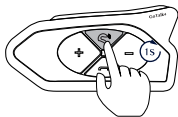

Power On

? "Power on"

■ Blue light

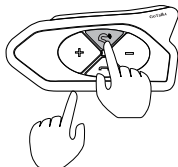


Power Off

Press the "Power" and "FM" button simultaneously


? "Power off"

■ Light off

3.2 Protective Film & Reset

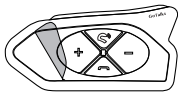

Before using, you could tear-off the protective film on the front panel.

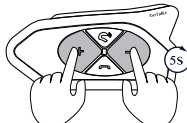


Factory Reset

Long-press the "+" and "-" button at the same time for 5s.


? "Power on"

■ Red light quick flashes then power on

3.3 Low Battery Indication/Charging Indication

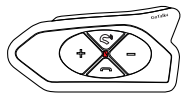

■ Red light flashes twice each 2 mins

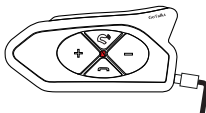

Charging


■ Red light always on

Full-charged

■ Light off

4 FM Radio On/Off & Station Switchable

When FM is on, it will automatically search the FM station. Intercom & FM could work at the same time.

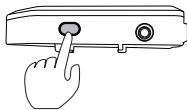


Single click to open the FM.

? "FM on"


Click again to turn-off the FM.

? "FM off"

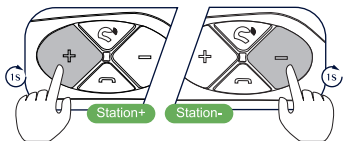

5 PHONE FUNCTIONS

5.1 Phone Pairing

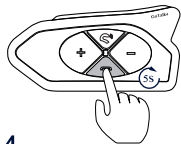

Long-press the "Phone" button for 5s to enter the pairing mode.

? "Phone pairing"

■ Red & Blue lights quick flash




Open your cellphone Bluetooth, search and pair the "GoTalk4".


? "Pairing successful"

■ Blue light flashes slowly twice


5.2 Music Playing

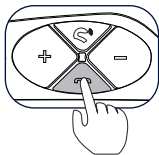

Single click the Phone button to play/pause the music.

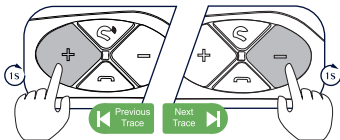

5.3 Voice Assistant

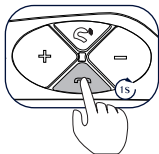

Press the "Phone" button for 1s to activate the Siri/Google assistant.




? "Beep"



When voice assistant arosed, then talk to the mic.




5.4 Phone Call Operations

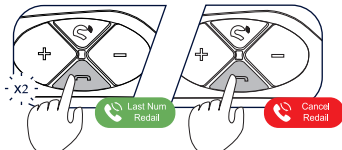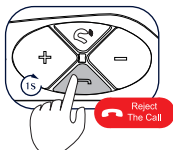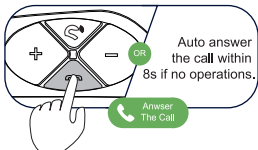

6. INTERCOM PAIRING


6.1 Two Intercom Pairing

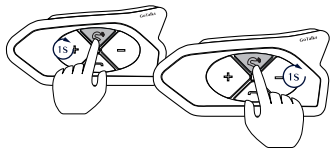

❶ Long press the “Power” button for 1s to power on both GoTalk4.

? “Power on”

■ Blue light

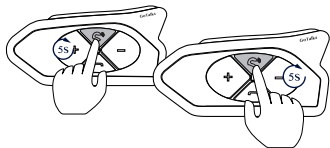

❷ After power on, long press the “Power” button again for 5s on both, the GoTalk4 will auto searching and paired successfully.

? “First intercom pairing”

■ Red & Blue lights quick flash

? “Pairing successful”

■ Blue light flashes slowly




❸ When paired successfully, both models could start to communicate directly then.

If sounds pairing failed, reset both models and start from step 1.

? “First intercom connected”

■ Blue light flashes slowly

6.2 Multi Intercom Pairing

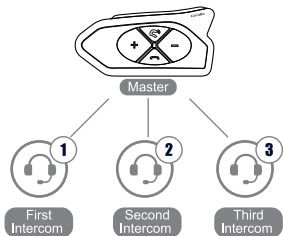

- 1 Regard your **GoTalk4** as the **Master**, and pair with the "First intercom" as the same step like "**Two Intercom Pairing**".

? "First intercom connected"

6.2.1 Pair with the Second Intercom

- 1 When **Master** and the **First Intercom** are connected, long-press the "Power" button of the **Master** for 5s till the Red & Blue lights flash, then click the "Vol+" button once. The **Master** will start to search and pair the "**Second intercom**".

 
? "First intercom pairing"


? "Second intercom searching"

- 2 Power on the **Second Intercom**, long-press the "Power" button for 5s, then the Master will automatically search and connect.

? "Pairing successful"

? "Second intercom connected"

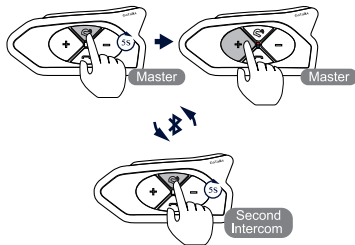

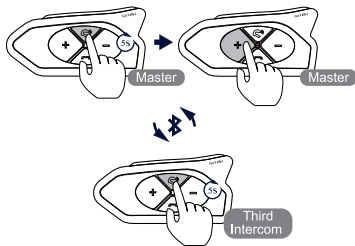

6.2.2 Pair with the Third Intercom

❶ When **Master** and the **Second Intercom** are connected, long-press the “Power” button of the **Master** for 5s till the Red & Blue lights flash, then click the “Vol-” button once. The **Master** will start to search and pair the “**Third intercom**”.

? “First intercom pairing”

? “Third intercom searching”

❷ Power on the **Third Intercom**, long-press the “Power” button for 5s, then the Master will automatically search and connect.

? “Pairing successful”

? “Third intercom connected”

❸ So far, the 4 models are all connected.

6.3 Intercom Switching



Single-click the “Power” button of the **Master** to pair the **First Intercom**.

? “Intercom disconnected”

? “First intercom connected”



Double-click the “Power” button of the **Master** to pair the **Second Intercom**.

? “Intercom disconnected”

? “Second intercom connected”

 


Triple-click the “Power” button of the **Master** to pair the **Third Intercom**.

? “Intercom disconnected”

? “Third intercom connected”

6.4 Pair with Other Intercom

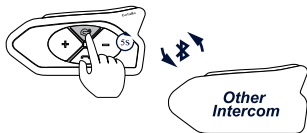


② Use your other Bluetooth intercom, enter the Bluetooth pairing mode.

③ The **GoTalk4** will auto searching the other intercom, and get connected for communication.

If can't be paired for many times, please contact your other model manufacturer if the model supports universal pairing.

- ? "Pairing successful"
- ? "First intercom connected"
- Blue light flashes slowly

6.5 Intercom Disconnection

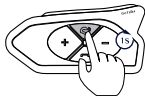

Long-press the "Power" button for 1s, the currently intercom would be disconnected.

- ? "Intercom disconnected"



...mierz wysoko